
# USER'S MANUAL



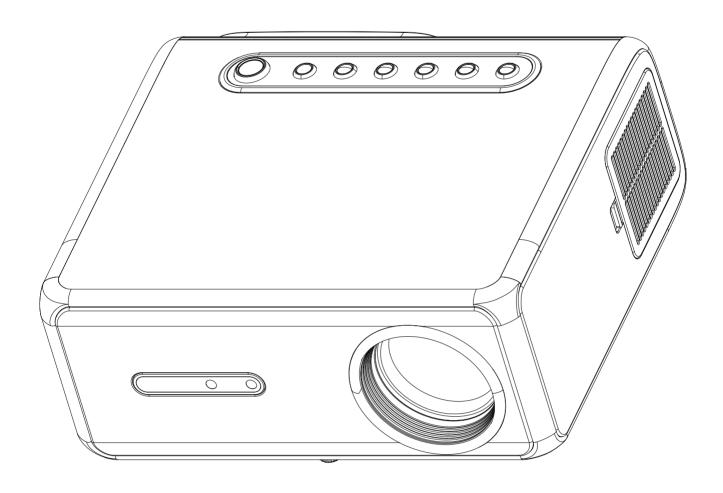

**YP530** 



# **Safety Precautions**

In order to ensure safe use of the machine, be sure to read it carefully before use.

### Warning!


#### How to use the projector correctly?

- 1. Do not look directly into the lens when the projector is working, the strong light will hurt the eyes.
- 2. Do not block the air outlet to avoid damaging the cooling function of the internal electronic equipment.
- 3. Do not use chemicals, cleaners or water to clean, but also to avoid rain, moisture and colorless liquid corrosion of the circuit board.
- 4. Keep the projector and accessories out of reach of children.
- 5. Keep the working environment of the projector dry and ventilated.
- 6. Do not put the projector in too hot or too cold environment, high or low temperature will shorten the service life of the device. The optimum temperature is 5°C~35°C.
- 7. Do not use heating equipment for dehumidification including but not limited to dryers and microwave ovens.
- 8. Do not press or place heavy objects on the projector to prevent damage
- 9. Do not throw, hit or shake the projector to prevent damage to the internal wiring.
- 10. Please contact after-sales service if you have any questions. Do not disassemble yourself.
- 11. Do not repair the projector yourself, if the projector does not work properly, please contact after-sales service repair.

### **Product List**

1, projector 2, remote 3, user manual 4, power cord 5, HDMI cable

# **Appearance And Function Introduction**

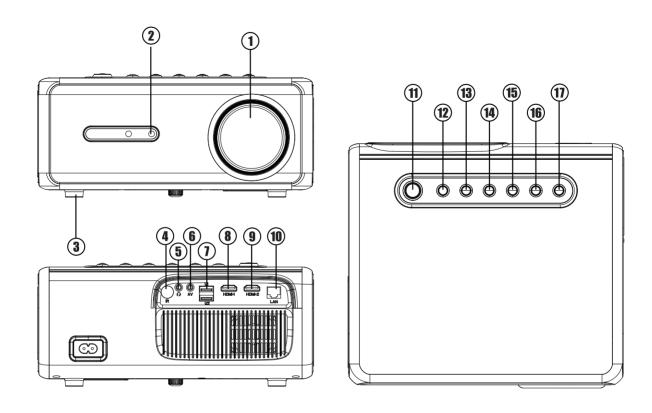

1, Lens 6, AV 13, Signal Source

2. Focusing 7. USB 14. Back

lens 8-9、HDMI 15、Confirm

3、Rubber Foot 10、LAN 16、UP


4、Keys 11、Power 17、Down

5. Keystone 12. Menu

### **Remote Control Button And Function**



### **Automatic Focus**

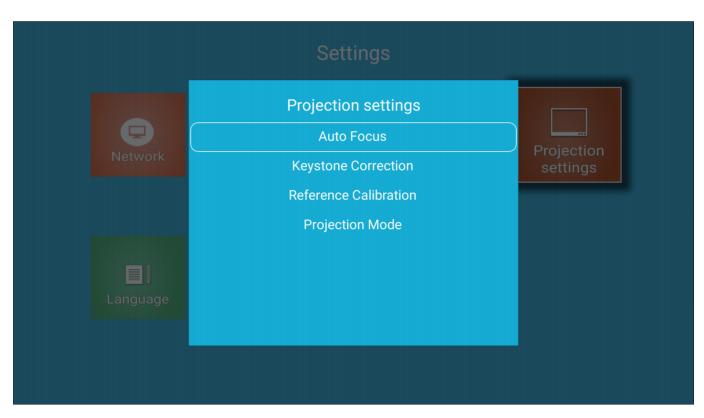

The auto focus function is enabled by default.

# **Protjection Specification**

Display	light source	Projective ratio	projector distance	Projected size
LCD	LED	1.3	1.2-5.7	<b>40-200</b> inch

Native resolution	Support resolution	Support Video	Support audio	Support picture
1920*1080	4K、1080P、720i、	AV/MP4/MKV//M	MP2/MP3/PCM/F	BMP/JPG/JPEG/P
	720P、576i、567P	OV/3GP/MPFG-1/	LAC/WMA/AAC/A	NG/GIF
		MPFG-2/MPEG-4	DPCM/Audio	
		ASP/MJPEG/H.26	Layrr/APE/MPEG	
		4/XVID/Divx3-Div		
		x5/XviD/H.264/H.		
		265/VC-1/RV8 、		
		9/WMV3		


# **Projection Distance, Dimension**

Projected size	projector distance	projected area (m*m)	
60	1.73	1.33*0.74	
80	2.3	1.77*1	
100	2.88	2.21*1.25	
120	3.45	2.65*1.5	
200	5.75	4.42*2.5	


## **Operating Guide**

- 1. Insert the power plug into the socket first, and then insert the other end into the projector
- 2. Press the power button to turn on the projector
- 3. Connect related devices to the projector
- 4. adjust the focus knob for the best display effect
- 5. select the content that can be supported to play

# **WiFi Connection**

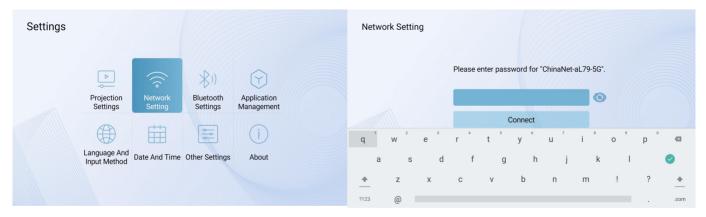


Select settings and then network

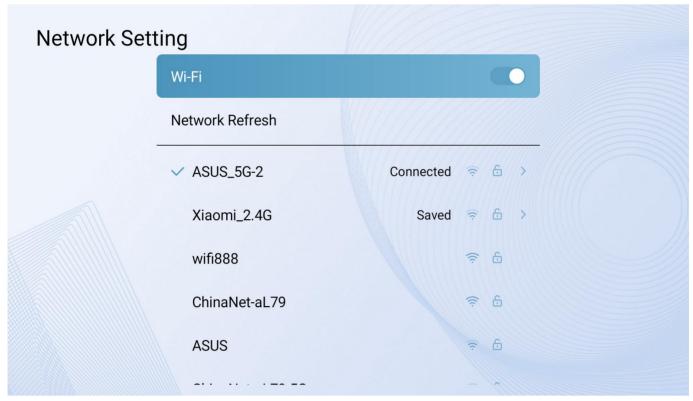


Select your wifi network and enter the correct password to complete the connection


### **Interface Introduction**

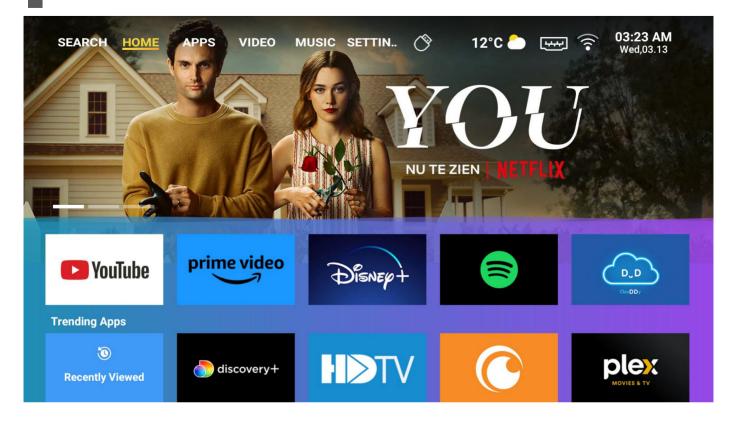


USB: Connect a USB flash drive for local playback. HDMI: Connect the HDMI output device for screen projection. My application: System pre-installed application and customer download application. Settings: Select Settings and press the OK key to go to the Settings page

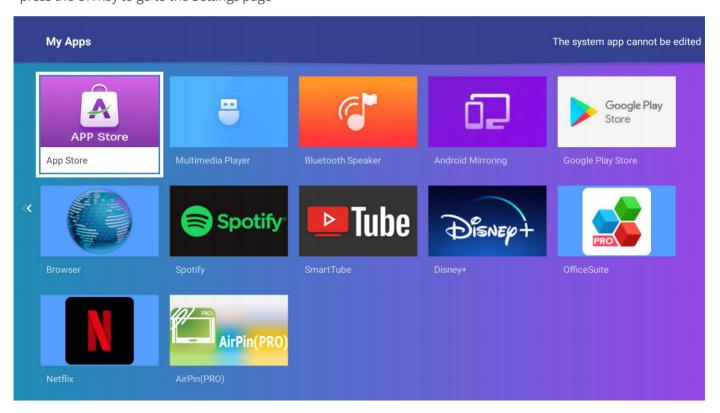


Projection setting: Move select "Projection Setting" and press "OK" to enter the setting page

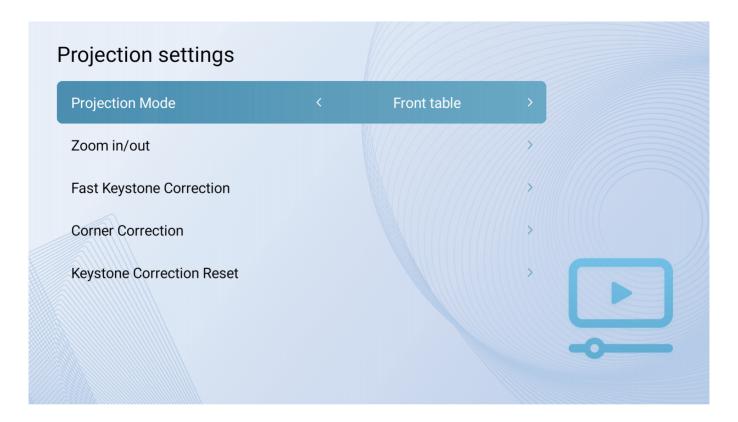


Installation mode: Move Select "Installation Mode" and press the left and right arrow keys of the remote control to select the corresponding installation mode: desktop forward projection, desktop rear projection, ceiling front projection, and ceiling rear projection

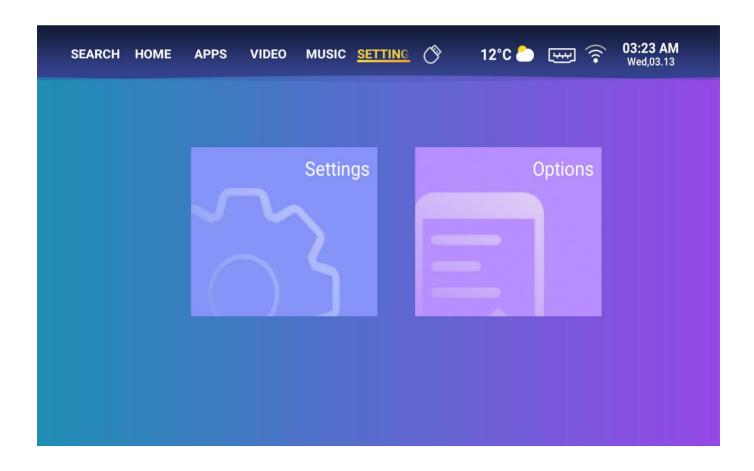

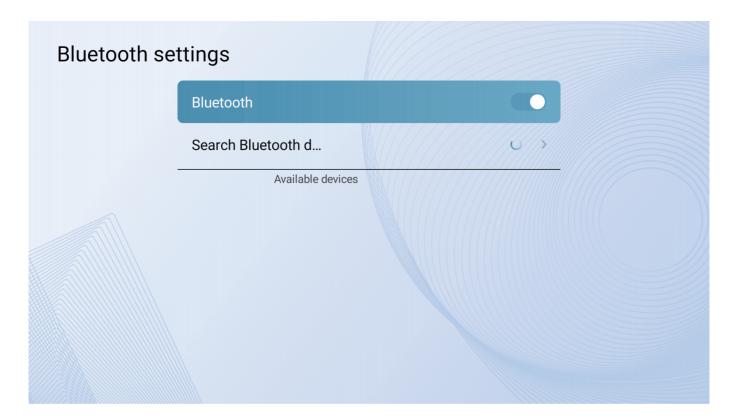


#### **Bluetooth Settings**

- 1. Select Bluetooth Settings and press the OK key to enter the setting screen
- 2. Select Bluetooth Switch and press the OK key to switch the status
- 3. After turning on Bluetooth, select the device to be paired and press the "Back" button to exit

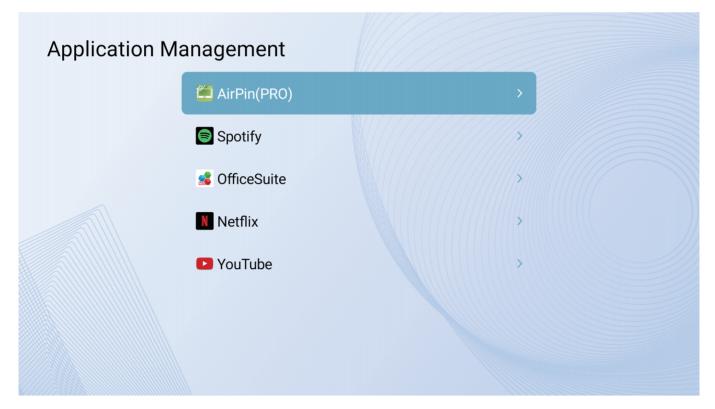


#### Application management

- 1. Select Application Management and press the OK key to access the Settings page
- 2. Use the arrow keys of the remote control to move to the APP that you want to manage and press the OK key to enter the Settings page, where you can clear cache and uninstall the APP

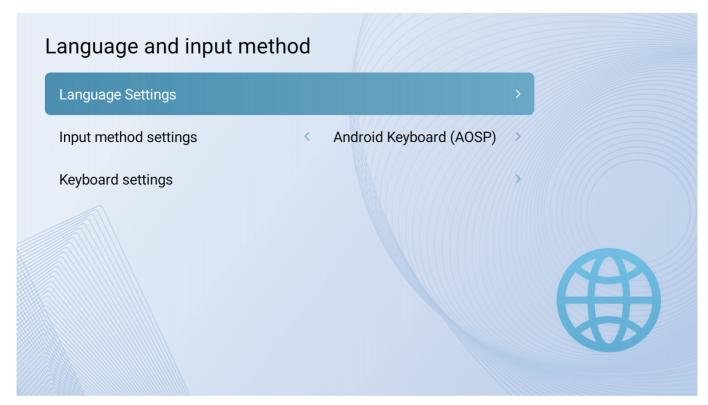


#### Application management


- 1. Select Application Management and press the OK key to access the Settings page. 1. Select Language and Input Method and press the OK key to access the Settings page
- 2. Select Language Settings and press the OK key to select a language. Select a language and press the OK key
- 3. Select Input Method and press the OK key. Select the desired input method and press the OK key. Press the Back key to exit the current page
- 2. Use the arrow keys of the remote control to move to the APP that you want to manage and press the OK key to enter the Settings page, where you can clear cache and uninstall the APP

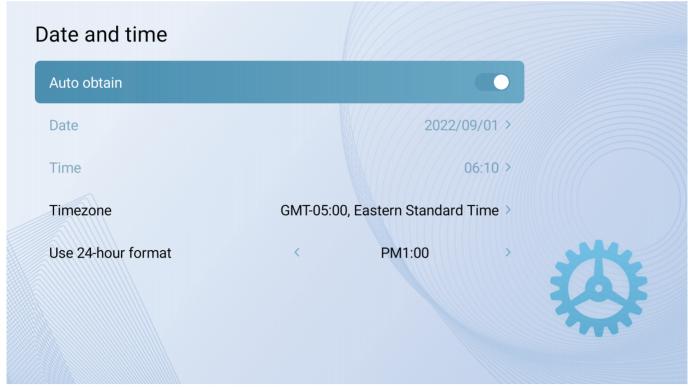

Projection setting: Move select "Projection Setting" and press "OK" to enter the setting page
Select Date and Time and press the OK key to enter the setting page. If the network provides time, select Automatically and press the OK key to switch the status. To manually set the time and date, switch "Auto Get" to off and then manually set the time and date

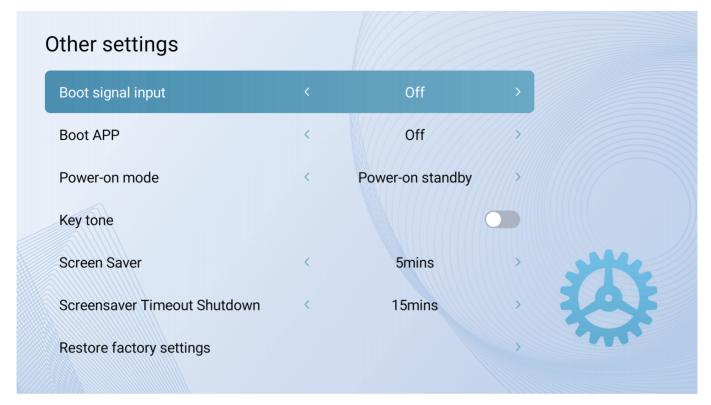

Move select "Other Settings" and press the "OK" key to enter the setting page. Move the relevant options to select the startup signal source, startup APP, power-on mode, and key sound effect. The projector can also be restored to factory status by "Factory Reset"

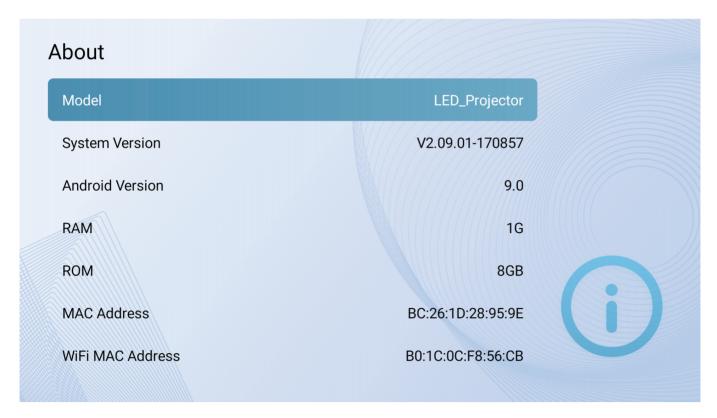

#### About this machine

- 1. Select About this device and press the OK key to go to the screen. The screen contains information about the model, system version, Android version, memory capacity, and ROM capacity of this device.
- 2. Select Local Upgrade and press the OK key to upgrade the projector system

### **In-connection**

The projector needs to select the corresponding signal channel when connecting with different devices

The Signal Source button can directly bring up the signal channel menu on any interface

Press the up/down key to switch signal channels

Press the OK key to confirm the signal channel

Press the return key to cancel the connection or press the select key to enter another screen

HDMI connection: one HDMI cable, one end is connected to the signal output device (such as: computer, HD player, DVD, etc.), the other end is connected to the HDMI interface of the projector, and the HDMI channel is selected by the signal source selection key

USB connection: Connect the USB flash drive, select the corresponding content in the main interface to open the video, audio, picture, text and other files

# **External Channel Osd Menu Settings**

External channel OSD menu Settings

After the projector is connected to an external device (such as HDMI), long press the menu key to adjust the sound and image on the OSD menu interface OSD menu adjustment Settings are as follows:

- 1. Press and hold the menu key to access the OSD menu
- 2. Press the up and down arrow keys to select the items that need to be adjusted
- 3, press the left and right arrow keys to select the parameters to be set and set the parameters
- 4. Press the Back key to save the Settings



#### Warning:

The equipment is only used in areas with an altitude of 2000 meters and below;

Appliance coupler as disconnect device;

Equipment projection light source using LED light source, do not look at the machine lens!

#### **Statement:**

The Company reserves the right to modify the contents of this manual without any prior notice

Note: This product will continue to optimize the software, the actual operation interface may be different from the picture in the manual, but it will not affect the normal realization of the function described in the manual. We apologize for any inconvenience this may cause. We will change the operating mode without prior notice due to changes in the operating interface and some functions.